

Replacements

Yellow Wax Ready Sprues

4 mm Dia. Runner Bar

- 013-110 Yellow Ready Sprues, pkg of 50
- 013-111 Yellow Ready Sprues, pkg of 250

Green Stick-Tite™ Ready Sprues

4 mm Dia. Runner Bar

- 013-130 Green Ready Sprues, pkg of 50
- 013-131 Green Ready Sprues, pkg of 250

Orange Stick-Tite™ Ready Sprues

5 mm Dia. Runner Bar, 55 mm bar length

- 013-140 Orange Ready Sprues, pkg of 50
- 013-141 Orange Ready Sprues, pkg of 250

Red Stick-Tite™ Ready Sprues

5 mm Dia. Runner Bar, 55 mm bar length

- 013-170 Red Ready Sprues, pkg of 50
- 013-171 Red Ready Sprues, pkg of 250

Quik Sprues

- 013-122 Yellow Quik Sprues 8 Ga. pkg of 500
- 013-123 Green Quik Sprues 6 Ga. pkg of 500

Stick-Tite™ Quik Sprues

- 013-152 Orange Quik Sprues 8 Ga. pkg of 500
- 013-153 Red Quik Sprues 6 Ga. pkg of 500



US Patent # 4,676,294


Quik Set Instrument

- 006-020 Quik Set Instrument




Ready Sprues

A belle de st. Claire® Product

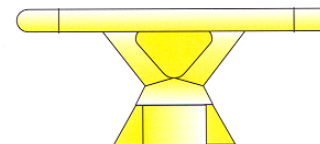

For belle de st. Claire
Stainless Steel
and Ringless Ovals

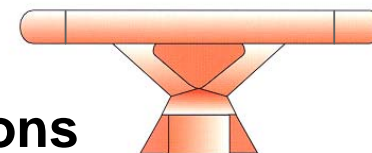

Instructions

US Patent # 4,573,921

Made In USA

Rev. 5/06

Replacements

Yellow Wax Ready Sprues

4 mm Dia. Runner Bar

- 013-110 Yellow Ready Sprues, pkg of 50
- 013-111 Yellow Ready Sprues, pkg of 250

Green Stick-Tite™ Ready Sprues

4 mm Dia. Runner Bar

- 013-130 Green Ready Sprues, pkg of 50
- 013-131 Green Ready Sprues, pkg of 250

Orange Stick-Tite™ Ready Sprues

5 mm Dia. Runner Bar, 55 mm bar length

- 013-140 Orange Ready Sprues, pkg of 50
- 013-141 Orange Ready Sprues, pkg of 250

Red Stick-Tite™ Ready Sprues

5 mm Dia. Runner Bar, 55 mm bar length

- 013-170 Red Ready Sprues, pkg of 50
- 013-171 Red Ready Sprues, pkg of 250

Quik Sprues

- 013-122 Yellow Quik Sprues 8 Ga. pkg of 500
- 013-123 Green Quik Sprues 6 Ga. pkg of 500

Stick-Tite™ Quik Sprues

- 013-152 Orange Quik Sprues 8 Ga. pkg of 500
- 013-153 Red Quik Sprues 6 Ga. pkg of 500



US Patent # 4,676,294


Quik Set Instrument

- 006-020 Quik Set Instrument




Ready Sprues

A belle de st. Claire® Product

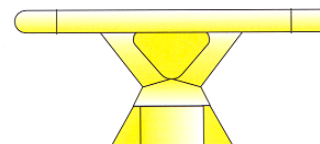

For belle de st. Claire
Stainless Steel
and Ringless Ovals

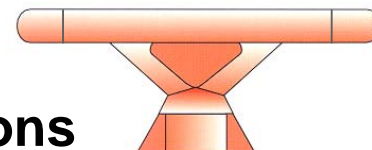

Instructions

US Patent # 4,573,921

Made In USA

Rev. 5/06


Ready Sprue Patterns

For Large and Small Ovals

Ready Sprues are molded with a distribution bar that is the correct length for Large Oval Formers. Trimming markers near the ends of the bar to indicate where to trim for use with Small Oval Formers.



Use the Ready Sprue as is for **Large Oval Formers**.

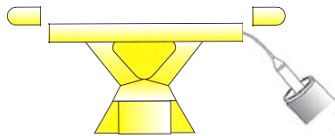

To use the Ready Sprue in **Small Oval Formers**:
Use a hot spatula tip and trim the ends off the distribution bar at the trimming markers.

Stick-Tite™ Wax Formula

For easy setting of Quik Sprue gates.


Use a hot spatula tip on the distribution bar where a sprue gate is to be attached. The molten spot will remain tacky while setting the sprue gate.

Yellow Ready Sprues




Pure Wax Ready Sprue with 4 mm diameter distribution bar and trimming markers.

Green Stick-Tite™ Ready Sprues

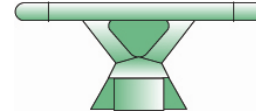

Stick-Tite™ wax formula Ready Sprue with 4 mm diameter distribution bar and trimming markers.

Orange Stick-Tite™ Ready Sprues

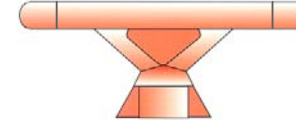

Stick-Tite™ wax formula Ready Sprue with 5 mm diameter distribution bar and trimming markers. Extra long 55 mm bar length for use in Large Ringless Ovals.

Red Stick-Tite™ Ready Sprues



Stick-Tite™ wax formula Ready Sprue with 5 mm diameter distribution bar and trimming markers. Extra long 55 mm bar length for use in Large Ringless Ovals.


Ready Sprue Patterns

For Large and Small Ovals

Ready Sprues are molded with a distribution bar that is the correct length for Large Oval Formers. Trimming markers near the ends of the bar to indicate where to trim for use with Small Oval Formers.



Use the Ready Sprue as is for **Large Oval Formers**.

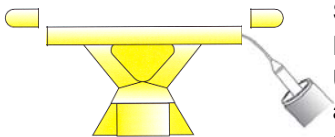

To use the Ready Sprue in **Small Oval Formers**:
Use a hot spatula tip and trim the ends off the distribution bar at the trimming markers.

Stick-Tite™ Wax Formula

For easy setting of Quik Sprue gates.

Use a hot spatula tip on the distribution bar where a sprue gate is to be attached. The molten spot will remain tacky while setting the sprue gate.

Yellow Ready Sprues




Pure Wax Ready Sprue with 4 mm diameter distribution bar and trimming markers.

Green Stick-Tite™ Ready Sprues




Stick-Tite™ wax formula Ready Sprue with 4 mm diameter distribution bar and trimming markers.

Orange Stick-Tite™ Ready Sprues

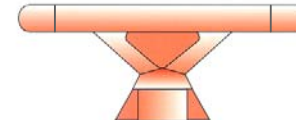

Stick-Tite™ wax formula Ready Sprue with 5 mm diameter distribution bar and trimming markers. Extra long 55 mm bar length for use in Large Ringless Ovals.

Red Stick-Tite™ Ready Sprues

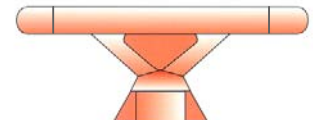

Stick-Tite™ wax formula Ready Sprue with 5 mm diameter distribution bar and trimming markers. Extra long 55 mm bar length for use in Large Ringless Ovals.